


CONNECTING THE BATTERY ADAPTER TO THE SOUND DEVICES 664

The battery adapter has a Hirose 4-pin connector featuring a 5-key mating guide. This 5-key system permits only one way of coupling so that you can find the correct position to connect even when blind mating.

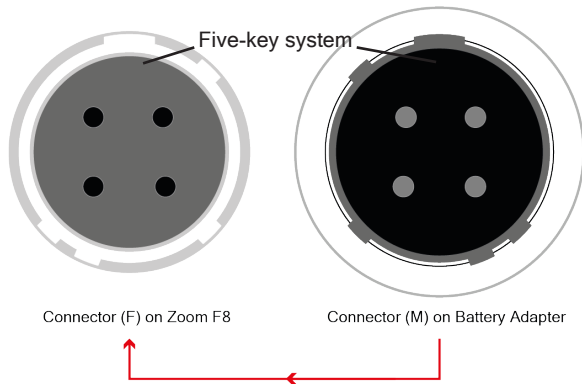

PLEASE BE VERY CAREFUL WHEN CONNECTING THE BATTERY ADAPTER TO THE SOUND DEVICES 664. IT IS VERY FRAGILE AND CAN EASILY BE DAMAGED.

CONNECTING THE BATTERY ADAPTER TO THE SOUND DEVICES 664

If you look closely at the two connectors you can see the 5-key system (the notches and ridges).

Align the five-key mating guides on both connectors to find the right position to connect and gently push the male connector until it clicks.

Following the five-key mating guide will prevent insertion mistakes and will help you avoid unnecessary damage.