

HOW TO SET THE CHANNEL FREQUENCY

Please note: with this system, you can only pair one transmitter with one receiver.



PORTABLE DIVERSITY TUNER (URX-P03)

First, ensure the correct band is selected. If you are using this equipment in the UK**, select TV Channel 38-40:

R
E
C
E
I
V
E
R

1. While the unit is turned on, use the + or - buttons to display the BAND menu.
2. Hold the SET button until the band flashes. Then use the + or - button to select TV38-40, then press the SET button.

 
 
 
The display stops flashing and the desired band is set.

3. Use the + or - buttons to display the GP/CH (group/channel) menu
4. Press and hold the SET button for one second or longer until the channel group display starts flashing
5. Use the + or - button to select the desired group name, then press the SET button

The channel group is set, and the channel number display starts flashing.

6. Use the + or - button to select the desired channel number, then press the SET button

The display stops flashing and the desired channel is set.

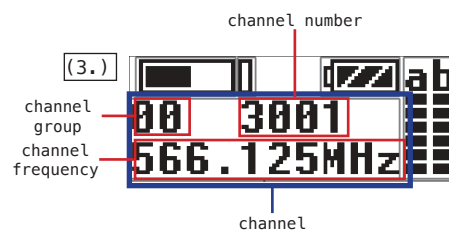

YOU CAN ONLY USE FREQUENCIES ON CHANNEL 38 (ANYTHING BETWEEN 606.500MHz AND 613.500MHz). ANY CHANNELS BEYOND THIS RANGE ARE **ILLEGAL** TO USE.

BODY-PACK TRANSMITTER (UTX-B03)

First, ensure the correct band is selected. If you are using this equipment in the UK**, select TV Channel 38-40:

T
R
A
N
S
M
I
T
T
E
R

1. While the unit is turned off, press and hold the SET button and the POWER/MUTING button at the same time to turn the power on.
2. Use the + or - buttons to display the BAND menu.
3. Hold the SET button until the band flashes. Then use the + or - button to select TV38-40, then press the SET button.

 
The display stops flashing and the desired band is set.

4. Use the + or - buttons to display the GP/CH (group/channel) menu
5. Press and hold the SET button for one second or longer until the channel group display starts flashing
6. Use the + or - button to select the desired group name, then press the SET button

The channel group is set, and the channel number display starts flashing.

7. Use the + or - button to select the desired channel number, then press the SET button

The display stops flashing and the desired channel is set.

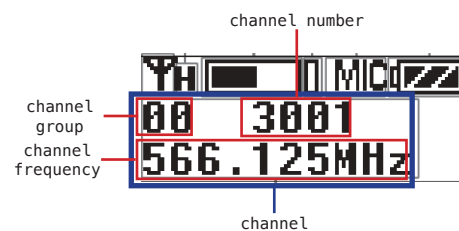

Ensure the same channel is selected on the transmitter and receiver within the same system.

**If you are using this equipment outside the UK you must look at the rules on radio frequency usage in the country you are going to as you may need to apply for a permit/license.